


Keyboard Module

The illustrations below show how to remove the Keyboard and disassemble the Keyboard Cover.

Remove the Keyboard

1. Open 5 latches (ESC, F5, F9, PrtSc and End) on keyboard module by a pair of tweezers.

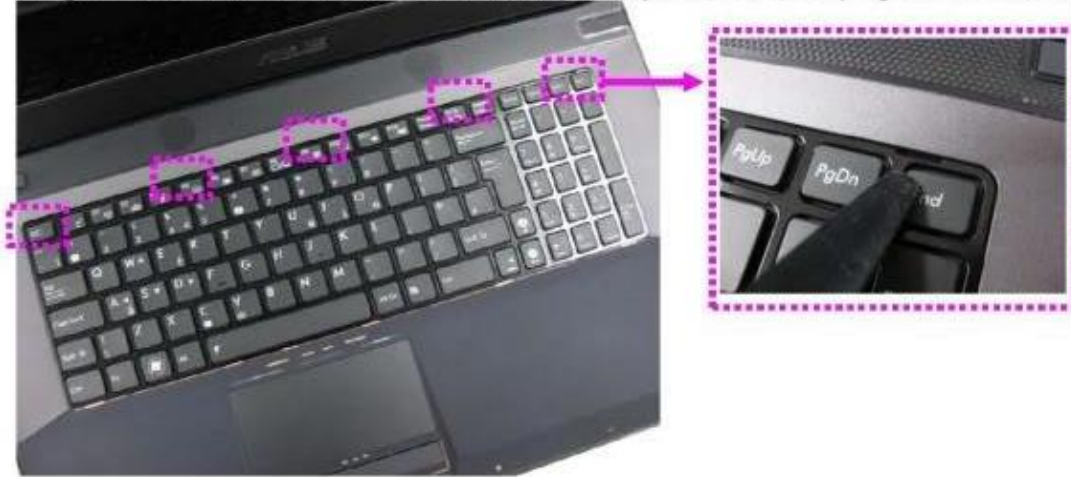

2. Turn over the keyboard plate and disconnect the keyboard FPC, LED FPC and remove the keyboard plate.

